



Quick Installation Manual v1.4

1500V PLC CCO




1 Introduction

Solis PLC CCO is applied in PV systems to achieve power line communication. Power Line Communication is transmission of data over the AC Wires of the system.

2 Package List

Package list is shown below:

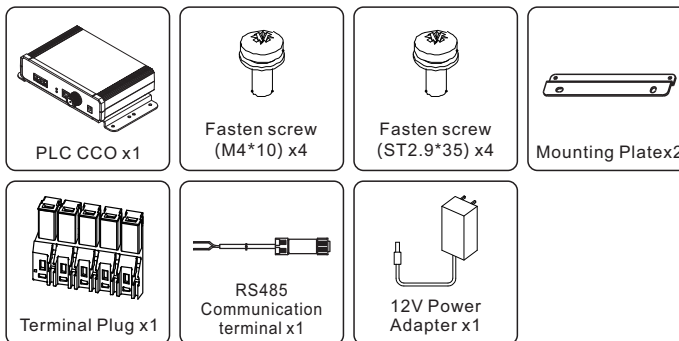

3 Warning


1. Disconnect any electrical connection and verify no live voltage before installation to prevent potential electrical hazard.
2. Verify Inverter AC Switch is in the "OFF" position.
3. Verify equipment has adequate ventilation to ensure system performance.
4. Ensure area of operation has no strong electromagnetic sources nearby.
5. Please ensure there is no heat source nearby.
6. Before doing any maintenance work, please ensure the power is OFF.
7. The transmission distance of PLC shall not exceed 1000 meters. If the power cable is underground, the distance shall not exceed 500 meters.
8. For RS485 cable, it is recommended to use the shielding twisted pair of 1²mm~1.5²mm. The shielding layer should be grounded at a single point, and the maximum transmission distance is 1000 meters.
9. PLCs from multiple manufacturers cannot be used in the same PV subarray, if you need to use it, please contact the manufacturer's technical staff in advance.
10. The PLC CCO should be connected as close to the AC side of the inverter as possible to reduce the number of circuit breakers passing by the PLC.
11. It is recommended that only one PLC CCO be connected to a single bus.

Note:

All operations must be conducted by professional electrical technicians.


4 Wall Installation

1. Use ST2.9*35 screws to fix the backplane to the PLC box, and use M4*10 bolts to fix the backplane to the installation.
2. Torque value = 1.2Nm

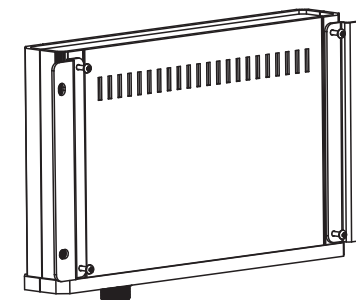


5 Cable Connection


1. Strip off the insulation as shown below.

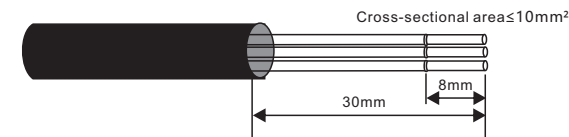


2. Use a slot type screwdriver to press the position in red and insert the A, B, C to Pin 1,2,3.

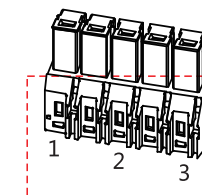


3. Connect the terminal to PLC CCO as shown below.

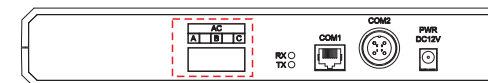

4. Connect RS485 communication cable to COM1(RJ45) or COM2(4 core connector).Only the Modbus-RTU protocol is supported. RJ45 interface: serial numbers 1 and 4 correspond to RS485 A, and serial numbers 2 and 5 correspond to RS485 B.

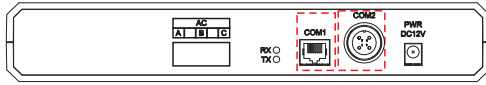

5. Connect 12V power line to PWR DC 12V port on the PLC CCO device.

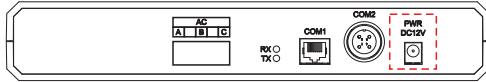


6 Finish Installation

Dear users, you have completed the whole installation process.

7 Working Principle

Solis string inverters integrated with PLC communication module “PLC STA” can conduct PLC through AC power cables and communicate with the PLC CCO. The PLC CCO uses the isolation coupling circuit to isolate low-frequency AC power and protects the internal board. It conducts bi-directional PLC signaling and RS485 signal conversion to communicate with a corresponding datalogger.

The diagram of PLC communication system is as follows:

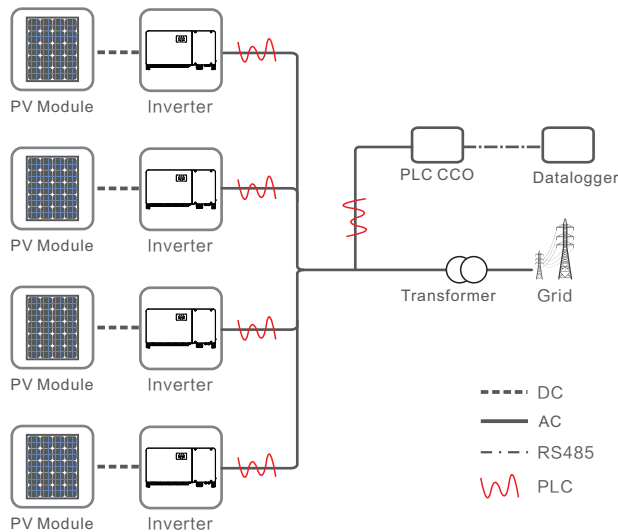

8 Characteristic

1. Adopt OFDM technology, subcarrier supports BPSK, QPSK, 8QAM, 16QAM, 64QAM modulation method.
2. Integrated with high performance ARM CPU, main frequency reaches 266MHz, satisfying smart grid requirements.
3. Support FEC and CRC function with strong capability of noise reduction and error recovering.
4. Support ad-hoc network and dynamic-route addressing function.

9 Technical specifications

Product name	1500V PLC CCO
Input voltage of the power adapter	100V AC~240V AC~50Hz/60Hz
Power consumption	< 5W
Input cable voltage of the AC port	380V AC~920V AC
Operating temperature	-25℃~+70℃
Relative humidity (non-condensing)	5%~95%
Altitude	0m~4000m
Protection level	IP20
Installation mode	Hanging installation
Maximum number of PLC STAs that can be connected	60pcs
Maximum transmission rate	115200bit/s
Dimensions (W x H x D)	255mm×165mm×45mm
Weight	485g
Certification	UL, FCC

10 Contact us

Ginlong Technologies Co., Ltd.
 No. 57 Jintong Road, Binhai Industrial Park,
 Xiangshan, Ningbo, Zhejiang, 315712, P.R.China.
 Tel: +86 (0)574 6578 1806
 Email: info@ginlong.com
 Web: www.solisinverters.com